

How to apply the patch v2.4 in the SC-DAD

Topics in this document

[How to apply the SC-DAD patch v2.4.....1](#)

How to apply the SC-DAD patch v2.4

This patch is applicable in all SC-DAD devices with analog inputs (from version v2.0 to v2.3).
NOTE: The patch will reboot the device, the data acquisition will be stopped for 20 seconds.

To apply the patch

1) Click on the Tools menu button from the web configuration software (to access on the web configurator open a web browser and type: <http://xxx.xxx.xxx.xxx/> where xxx.xxx.xxx.xxx is the SC-DAD IP)




2) Insert the system password if asked (default password: root) and then click to the login button



3) Click on the Software Upgrade/Backup Restore button



- 4) Select the patch 2.4 file and use “send” button to start the upgrade

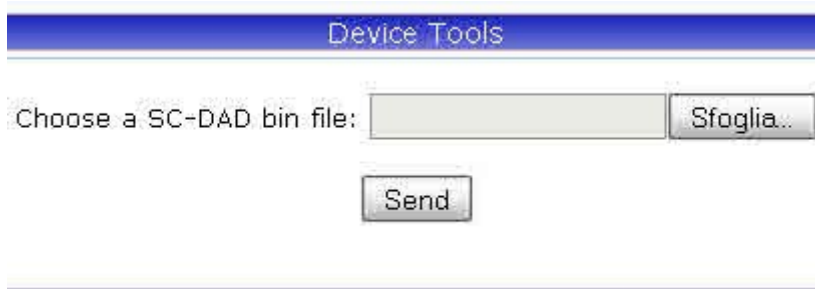

- 5) A white page will appear, then wait for the device automatic reboot (15 seconds) and then close the web page.

NOTE: Don't use the refresh or back button of the web browser.

- 6) Wait 30 seconds and open the web configurator again (to access on the web configurator open a web browser and type: <http://xxx.xxx.xxx.xxx/> where xxx.xxx.xxx.xxx is the SC-DAD IP) the firmware version should be now set to v2.3